

Components

Foot Control I Valve Service Kit

90.0010.00



- For use with Foot Control I Valve (38.0659.00)

Foot Control III Valve

38.0761.00



- With relay
- Replaces 38.0807.01 and 38.0659.00
- Not for A-dec 500 foot control

Lever Foot Control Service Kit

90.0313.00



- For use with Lever Foot Control Valve (38.0201.00)

Foot Control II Valve Service Kit

90.0312.00



- For use with Foot Control II Valve (38.0607.01)

Foot Control III Valve Service Kit

90.0593.00



- For use with Foot Control III Valve (38.0761.00)
- Also use with A-dec 500, 400, and 300 foot controls

Service Tip

WATER LEAKS FROM HANDPIECES AFTER REMOVING FOOT FROM FOOT CONTROL

Some water leaks can be caused by pinched foot control tubing, which blocks the exhaust exit out of the foot control and traps the water coolant signal.

REMINDER: TROUBLESHOOTING AN ACTIVE FOOT CONTROL

Before removing the foot control disc, move the master On/Off toggle to the OFF position and bleed the system of air pressure. This prevents the foot control stem from being forcefully ejected from the Foot Control II valve.

If the air supply to the foot control must be active while testing, before moving the master On/Off toggle to the ON position, ensure that the stem assembly in the foot control valve cannot be ejected.